



Configuration Modes

	AS	PS	JTAG
MSEL	R15	R16	R17
nCE	R12	R18	R19

MSEL	AS	PS	JTAG
R15	DNP	DNP	DNP
R16	0R0	DNP	0R0
R17	DNP	DNP	DNP
R18	0R0	0R0	0R0
R19	DNP	0R0	DNP
R22	0R0	0R0	0R0
R12	10K	0R0	0R0 / 10K

- * In JTAG mode MSEL can not be left floating!
- * DNP = Do Not Place

